

Item Number:

324318

Automatic Shoe Cover Dispenser

General Description:

- Hands-free, non-motorized shoe cover dispenser
- Spring mechanism releases cover around shoe
- Non-motorized function
- Using shoe covers helps eliminate exposure to contamination and increases workplace safety and productivity
- Fits most shoe sizes
- Use with shoe covers Item# 324320, sold separately

Applications

- | | |
|-----------------|----------------|
| • Food Service | • Laboratories |
| • Manufacturing | • Agriculture |


Technical Data

Material:	Plastic, Stainless Steel	
Color:	Black	
Capacity:	40 covers	
Size:	17"L x 9"W x 6"H	
Packaging:	1 per box, 6 boxes per case	
Dimensions:	Case Dimensions:	Case Weight:
	20.87"L x 18.90"W x 22.83"H	50.71 lb.
COO:	China	



Item# 324318 Shoe Cover Dispenser


Instructions for Use

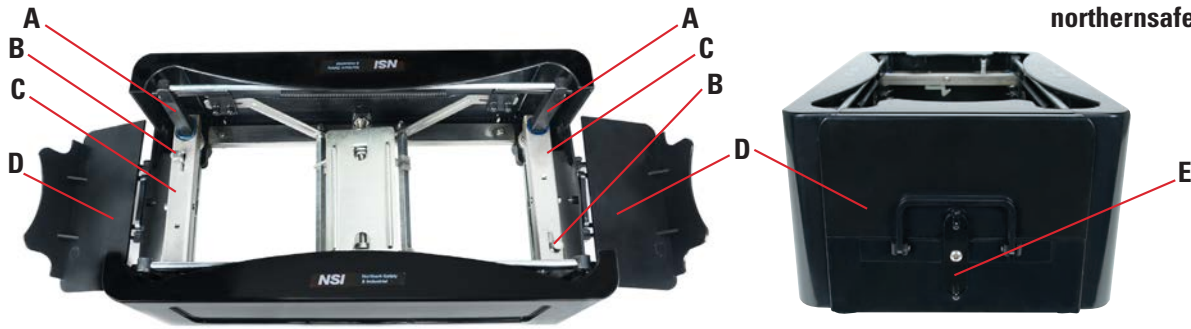

Step 1: Turn knob (E) to horizontal position on both side panels (D) to unlock.



Step 2: Lower panel doors (D).

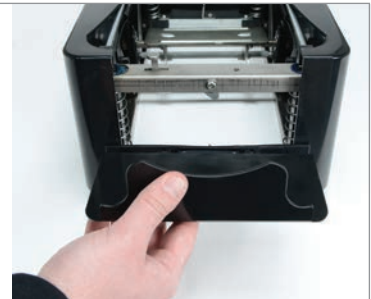

Step 3: Position dispenser so that side panel (D) is in front of you.

Step 4: Press tab (B) with left hand and lower lever (C) with right hand until hook engages on bottom of unit.

Step 5: Repeat on other side panel.



Step 6: Remove rubber bands from one roll of shoe covers.

Step 7: Leaving twist ties on shoe covers, place plastic hooks one corner (A) at a time, in a rectangular shape, working in opposite directions, as shown.



*Be careful not to touch metal tabs (B) when you insert shoe covers.


Step 8: Remove twist ties after installing each pack of shoe covers.

Step 9: Repeat with up to fifteen pairs of shoe covers. Do not exceed twenty pairs of shoe covers.



Step 10: Raise both side panels (D).

Step 11: Turn knobs (E) to vertical positions to lock.

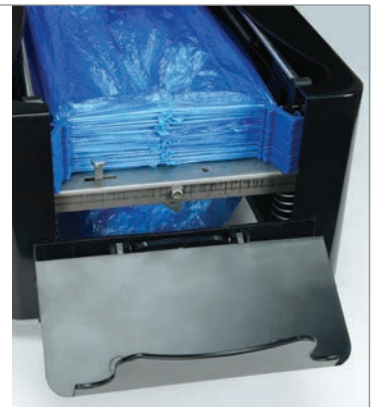

Step 12: Insert foot into main chamber.



Step 13: Remove foot from chamber.

